


# Storage Equipment

Helmet holder is located on the left side below the seat.

**Helmet holder**

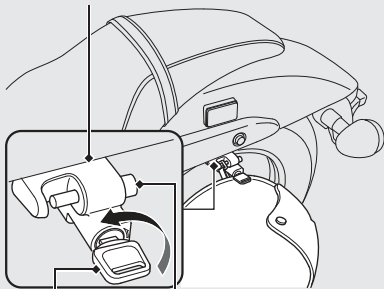

**Ignition key Pin**

- ▶ Use the helmet holder only when parked.
- ▶ Insert the ignition key and turn it counterclockwise to unlock. Hang your helmet on the holder pin and push it in to lock. Remove the key.

## **⚠ WARNING**

Riding with a helmet attached to the holder can interfere with the rear wheel or suspension and could cause a crash in which you can be seriously hurt or killed.

Use the helmet holder only while parked. Do not ride with a helmet secured by the holder.