

## Changing Air Cleaner Element

Use a new Honda Genuine air cleaner element or an equivalent specified for your motorcycle.

### NOTICE

Using the wrong air cleaner element can result in serious damage to the engine.

1. Remove the air cleaner housing cover by removing the bolts.
2. Remove the air cleaner element.
3. Thoroughly clean the inside of the air cleaner housing.
4. Install the new air cleaner element.
5. Install the parts in the reverse order of removal.

