


Wheel Removal (VT750C2/C2F/C2B)

1. Park on a firm, level surface.
2. Support your motorcycle securely and raise the rear wheel off the ground using a maintenance stand or a hoist.
3. Remove the rear brake adjusting nut.
4. Disconnect the brake rod from the brake arm.
5. Disconnect the brake stopper arm from the brake panel by removing the cotter pin, stopper arm nut, washer and rubber grommet.
6. Loosen the axle holding bolt.

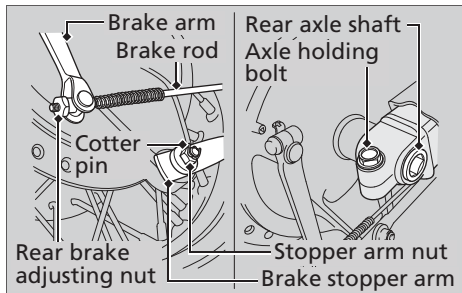

7. While holding the other end of the rear axle shaft with a wrench, remove the rear axle nut.
8. Pull the rear axle shaft out and remove the side collar.
9. Move the wheel to the right to separate it from the final drive gear case.
10. Remove the wheel.

