


■ Fuse Box Fuses (VT750C2S)

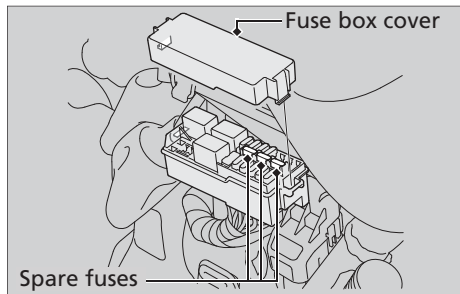

1. Remove the left side cover. ► P. 50
2. Remove the fuse box cover.
3. Pull the fuses out one by one check for a blown fuse. Always replace a blown fuse with a spare of the same rating.
4. Reinstall the fuse box cover.
5. Reinstall the left side cover.