

**Wheel Removal (VT750C ABS)**

1. Park on a firm, level surface.
2. Support your motorcycle securely and raise the rear wheel off the ground using a maintenance stand or a hoist.
3. Loosen the axle holding bolt.
4. While holding the outer end of the rear axle shaft with a wrench, remove the rear axle nut.
5. Remove the rear brake bracket bolt and bolt.
6. Pull the rear axle shaft out.
7. Remove the rear brake bracket, washer and side collar.

