


Fuse Box Fuses (VT750C ABS)

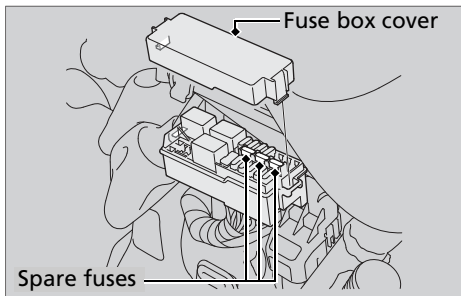

1. Remove the left side cover. [▶ P. 48](#)
2. Remove the fuse box cover.
3. Pull the fuses out one by one check for a blown fuse. Always replace a blown fuse with a spare of the same rating.
4. Reinstall parts in the reverse order of removal.