

# Troubleshooting

<b>Engine Will Not Start</b> .....	P. 77	<b>Electrical Trouble</b> .....	P. 91
<b>Overheating (High coolant temperature indicator is on)</b> .....	P. 78	Battery Goes Dead .....	P. 91
<b>Warning Indicators on or Flashing</b> .....	P. 79	Burned-out Light Bulb .....	P. 91
Low Oil Pressure Indicator.....	P. 79	Blown Fuse .....	P. 95
PGM-FI (Programmed Fuel Injection)			
Malfunction Indicator Lamp (MIL) .....	P. 79		
ABS (Anti-lock Brake System) Indicator (VT750C			
ABS only).....	P. 80		
<b>Tire Puncture</b> .....	P. 81		
Tube Repair and Replacement .....	P. 81		
Removing Wheels.....	P. 81		