 


## To set the clock:

 
- a Turn the ignition switch on.
- b Select the digital clock mode.
- c Press and hold the Select/Reset button until the hour digits start flashing.



- d Press the Select/Reset button until the desired hour is displayed.



- e Press and hold the Select/Reset button. The minute digits start flashing.



- f Press the Select/Reset button until the desired minute is displayed.



- g Press and hold the Select/Reset button until the display stops flashing. The clock is set.
  - ▶ The time can also be set by turning the ignition switch off.
  - ▶ The display will stop flashing automatically and the adjustment will be cancelled if the button is not pressed for about 30 seconds.