


Battery

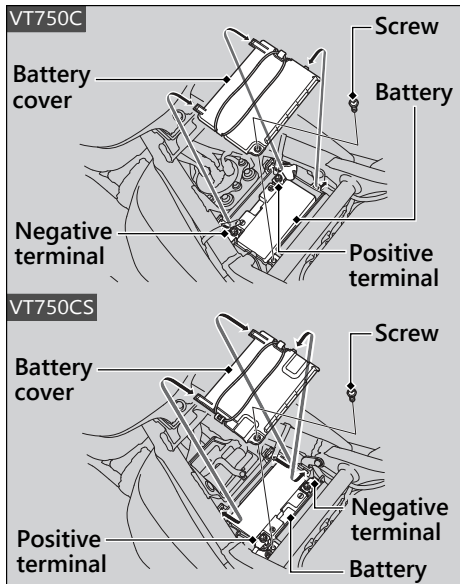

Removal

Make sure the ignition switch is in the OFF position.

1. Remove the seat. ➤ P. 53
2. Remove the battery cover by removing the screw.
3. Disconnect the negative \ominus terminal from the battery.
4. Disconnect the positive \oplus terminal from the battery.
5. Remove the battery taking care not to drop the terminal nuts.