


Fuse Box Fuses

VT750CS

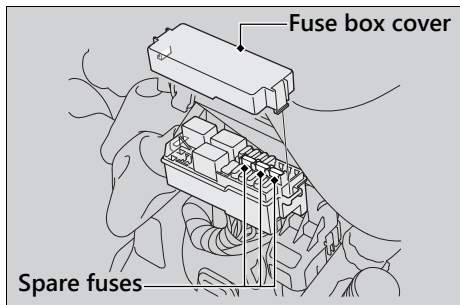

1. Remove the left side cover. ► P. 54
2. Remove the fuse box cover.
3. Pull the fuses out one by one to check for a blown fuse. Always replace a blown fuse with a spare fuse of the same rating.
4. Install the fuse box cover.
5. Reinstall the left side cover.