

To set the clock:

 
- ① Turn the ignition switch to the ON position.
- ② Select the digital clock mode.
- ③ Press and hold the Select/Reset button until the hour digits start flashing.



- ④ Press the Select/Reset button until the desired hour is displayed.



- ⑤ Press and hold the Select/Reset button. The minute digits start flashing.



- ⑥ Press the Select/Reset button until the desired minute is displayed.



- ⑦ Press and hold the Select/Reset button until the display stops flashing. The clock is set.
 - ▶ The time can also be set by turning the ignition switch to the OFF position.
 - ▶ The display will stop flashing automatically and the adjustment will be cancelled if the button is not pressed for about 30 seconds.