



Indicators

If one of these indicators does not come on when it should, have your dealer check for problems.

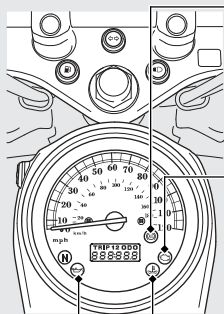


 **ABS (Anti-lock Brake System) indicator** **VT750CS**


Comes on when the ignition switch is turned to the ON position. Goes off when your speed reaches approximately 6 mph (10 km/h)

If it comes on while riding: ➔ P.85

 **PGM-FI (Programmed Fuel Injection) malfunction indicator lamp (MIL)**

Comes on briefly when the ignition switch is turned on with the engine stop switch in the  (Run) position.

If it comes on while engine is running: ➔ P.84

 **High coolant temperature indicator**

Comes on briefly when the ignition switch is turned to the ON position.

If it comes on while riding: ➔ P.83

 **Low oil pressure indicator**

Comes on when the ignition switch is turned to the ON position. Goes off when the engine starts.

If it comes on while engine is running: ➔ P.84