
Tire Puncture ► Removing Wheels

3. Remove the exhaust pipe joint nuts.

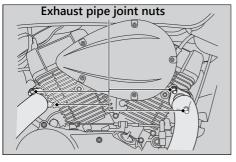

- **4.** Remove the muffler bracket bolts and nuts, washers.
- **5.** Remove the mufflers.

