


Accessory Socket

The accessory socket is located in the front box.

Open the cover to gain access to the accessory socket.

Rated capacity is

12W (12V, 1A)

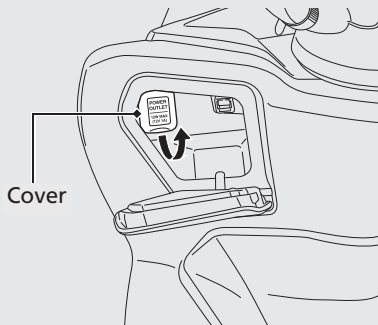

- ▶ To prevent the battery run down or weak the battery, keep the engine running while drawing current from the socket.
- ▶ Set the headlight in the low beam. The battery run down or damage to the accessory socket cause result.