

**NOTICE**

Jump starting using an automobile battery can damage your scooter's electrical system and is not recommended. Bump starting is also not recommended.

**NOTICE**

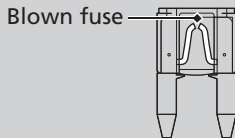
Installing non-Honda electrical accessories can overload the electrical system, discharging the battery and possibly damaging the system.

**Fuses**

Fuses protect the electrical circuits on your scooter. If something electrical on your scooter stops working, check for and replace any blown fuses. ➔ P. 89

**Inspecting and Replacing Fuses**

Turn off the ignition switch to remove and inspect fuses. If a fuse is blown, replace with a fuse of the same rating. For fuse ratings, see "Specifications". ➔ P. 113

**NOTICE**

Replacing a fuse with one that has a higher rating greatly increases the chance of damage to the electrical system.

If a fuse fails repeatedly, you likely have an electrical fault. Have your scooter inspected by your dealer.