

### Parking

- Park on a firm, level surface.
- If you must park on a slight incline or loose surface, park so that the scooter cannot move or fall over.
- Make sure that high-temperature parts cannot come into contact with flammable materials.
- Do not touch the engine, muffler, brakes and other high-temperature parts until they cool down.
- To reduce the likelihood of theft, always lock the handlebar and remove the key and close the shutter when leaving the scooter unattended.  
Use of an anti-theft device is also recommended.

### ■ Parking with the Side Stand or Center Stand

1. Stop the engine.
2. **Using the side stand**  
Push the side stand down.  
Slowly lean the scooter to the left until its weight rests on the side stand.

#### **Using the center stand**

To lower the center stand, stand on the left side of the scooter. Hold the left handle grip and the left grab rail. Press down on the tip of the center stand with your right foot and, simultaneously, pull up and back.