

## To change the average fuel mileage meter unit:

- 1 Turn the ignition switch to the ON position.
- 2 With average fuel mileage displayed, press and hold the mode switch more than 2 seconds.

You can select "mile/gal", "mile/L", "km/L" or "L/100km." If the "mile/gal" or "mile/L" is selected, the odometer and tripmeter are shown as "mile."

If the "km/L" or "L/100km" is selected, the odometer and tripmeter are shown as "km."