


Ignition Switch

Switches the electrical system on/off, locks the steering, and operates the fuel lid and seat opener switch.

- ▶ Key can be removed when in the OFF or  (Lock) position.

