


Storage Equipment *(Continued)*

Helmet Holder

The helmet holder is located under the seat. A helmet set wire is in the tool kit.

- ▶ Use the helmet holder only when parked.

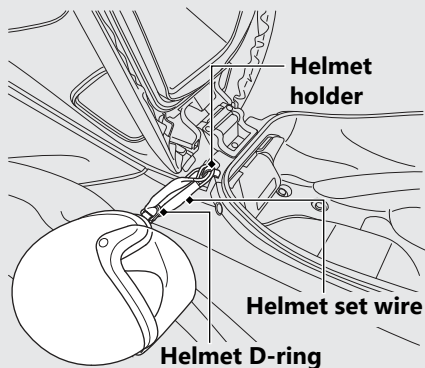

⚠ WARNING

Riding with a helmet attached to the holder can interfere with your ability to safely operate the scooter and could lead to a crash in which you can be seriously hurt or killed.

Use the helmet holder only while parked. Do not ride with a helmet secured by the holder.

Opening the Seat ➔ P.39