

Items		Frequency*1								Refer to page	
		× 1,000 mi	0.6	2.5	5	7.5	10	12.5	15		
		× 1,000 km	1.0	4	8	12	16	20	24		
Emission-Related Items	Fuel Line	⚡		I	I	I	I	I	I	I	–
	Throttle Operation	⚡		I	I	I	I	I	I	I	78
	Air Cleaner*2							R			69
	Crankcase Breather*3			C	C	C	C	C	C	C	79
	Spark Plug				R			R		R	63
	Valve Clearance	⚡	I	I	I	I	I	I	I	I	–
	Engine Oil		Initial = 600 mi (1,000 km) or 1 month: R Regular = Every 5,000 mi (8,000 km) or 12 months: R								66
	Engine Oil Strainer Screen				C		C		C		66
	Engine Idle Speed	⚡	I	I	I	I	I	I	I	I	–
	Radiator Coolant*5				I		I		I		70
	Cooling System	⚡			I		I		I		–
Evaporative Emission Control System*4	⚡					I			I	–	

Maintenance Level

- ⚡ : Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled. Procedures are provided in an official Honda Service Manual (P. 109).
- ⚡ : Technical. In the interest of safety, have your scooter serviced by your dealer.

Maintenance Legend

- I : Inspect (clean, adjust, lubricate, or replace, if necessary)
- R : Replace
- C : Clean