

11. Install a new sealing washer onto the drain bolt. Tighten the drain bolt.

**Torque:** 18 lbf·ft (24 N·m, 2.4 kgf·m)

12. Fill the crankcase with the recommended oil (► P. 55, ► P. 115) and install the oil fill cap/dipstick.

**Required oil**

**When changing oil & cleaning the strainer screen:**

1.0 US qt (0.9 L)

**When changing oil only:**

0.8 US qt (0.8 L)

13. Check the oil level. ► P. 65
14. Check that there are no oil leaks.