

Start Button	26
Starting the Engine	31
Steering Lock	28
Stopping Engine	94
Storage	
Center Compartment.....	41
Equipment	39
Front Box.....	42
Owner's Manual	41, 94
Tool Kit.....	41
Storing Your Scooter	98
Switches	26
T	
Throttle	78
Tires	
Air Pressure	57, 115
Puncture	86
Replacing	57
Tool Kit	41
Transporting Your Scooter	99
Tripmeter	20, 94
Troubleshooting	81
Turn Signal Indicator	25

V

Vehicle Identification Number	101
--	-----

W

Warning Indicators On	84
Warranty Coverage and Service	110
Washing Your Scooter	95
Weight Limit	15