

Starter Motor Operates But Engine Does Not Start

Check the following items:

- Check the correct engine starting sequence ➤ P. 29
- Check that there is petrol in the fuel tank

Starter Motor Does Not Operate

Check the following items:

- Check for a blown fuse ➤ P. 95
- Check for a loose battery connection or battery terminal corrosion ➤ P. 43
- Check the condition of the battery ➤ P. 91

XR150LEK-NZ type

- Make sure the side stand is raised.
- If the problem continues, have your motorcycle inspected by your dealer.