




 
Switches


Headlight dimmer switch

- : High beam
- : Low beam

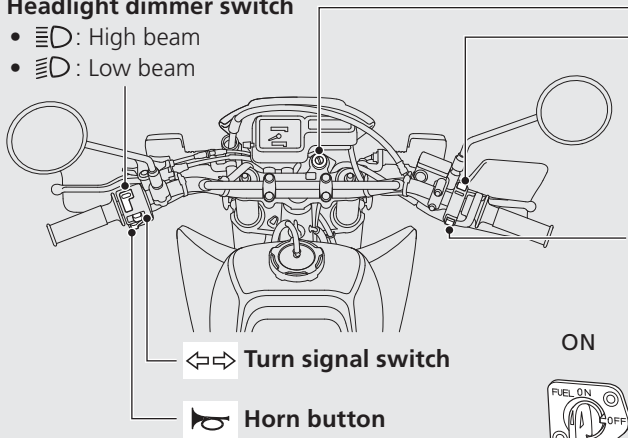

Engine stop switch

Should normally remain in the RUN  position.

- ▶ In an emergency, switch to the OFF  position to stop the engine.



Start button

Headlight turns off when operating the starter motor.



Turn signal switch

 
 


Horn button

ON

OFF

RES




Fuel valve

Fuel valve

The manual fuel valve is located on the left side under the fuel tank.

The three-way fuel valve is used to control the flow of fuel from the fuel tank to the carburetors.

ON - Normal position for riding. OFF - For parking, storing, or transportation

RES - For extra fuel to get to a gas station for refueling. **Refueling**  P.25