


Battery

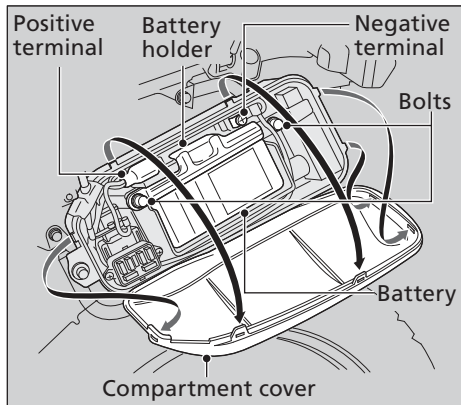

Removal

Make sure the ignition switch is OFF.

1. Remove the left side cover. ➤ [P.48](#)

2. Open the battery compartment cover.
3. Disconnect the negative \ominus terminal lead from the battery first.
4. Disconnect the positive \oplus terminal lead from the battery.
5. Remove the bolts and remove the battery holder.
6. Remove the battery taking care not to drop the terminal nuts.

Installation

Install the parts in the reverse order of removal. Always connect the positive \oplus terminal first. Make sure that bolts and nuts are tight.

For proper handling of the battery, see "Maintenance Fundamentals". ➤ [P.38](#)
 Battery Goes Dead. ➤ [P.88](#)