

# Troubleshooting

|                                    |      |
|------------------------------------|------|
| <b>Engine Will Not Start</b> ..... | P.81 |
| <b>Tire Puncture</b> .....         | P.82 |
| <b>Electrical Trouble</b> .....    | P.88 |
| Battery Goes Dead.....             | P.88 |
| Burned-out Light Bulb.....         | P.88 |
| Blown Fuse.....                    | P.91 |