

## Blown Fuse

Before handling fuses, see “Inspecting and Replacing Fuses”. ➔ [P.40](#)

1. Remove the left side cover. ➔ [P.48](#)
2. Open the battery compartment cover.  
➔ [P.51](#)
3. Pull the fuses out one by one check for a blown fuse. Always replace a blown fuse with a spare of the same rating.
4. Close the battery compartment cover.
5. Reinstall the left side cover.

### NOTICE

If a fuse fails repeatedly, you likely have an electrical problem. Have your motorcycle inspected by your dealer.

