

Troubleshooting

| | |
|------------------------------------|-------|
| Engine Will Not Start | P. 81 |
| Tire Puncture | P. 82 |
| Tube Repair and Replacement | P. 82 |
| Removing Wheels..... | P. 82 |
| Electrical Trouble | P. 88 |
| Battery Goes Dead..... | P. 88 |
| Burned-out Light Bulb | P. 88 |
| Blown Fuse..... | P. 91 |