Starting the Engine (Continued)

- ! Press the start button with the throttle completely closed.
 - Do not open the throttle when starting the engine with the choke on. This will lean the mixture, resulting in hard starting.
- lg Immediately after the engine starts, push the choke lever forward to the halfway position.
- In About a half minute after the engine starts, push the choke lever forward all the way to fully off.
- ! If idling is unstable, open the throttle slightly.

High Air Temperature 35°C (95°F) or Above:

- a Do not use the choke.
- b With the throttle slightly open (less than 1/8 in), press the start button.

Low Air Temperature 10°C (50°F) or Below:

- a Follow steps 1-6 under Normal Air Temperature.
- b Warm up the engine by opening and closing the throttle slightly.
- c Continue warming up the engine until it runs smoothly and responds to the throttle when the choke lever is at fully off.

If the engine does not start:

- a Press the engine stop switch to the off \bigotimes position.
- b Push the choke lever down all the way to fully off.
- c Open the throttle fully.
- d Press the start button for 5 seconds.
- e Wait 10 seconds, then press the engine stop switch to the RUN \bigcap position.
- Follow steps 1-2 under High Air Temperature.
- If Engine Will Not Start (P83)