

Tire Puncture ► Removing Wheels

- Do not push the brake pedal while the wheel is removed.


Installation

1. To install the rear wheel, reverse the removal procedure.
 - Take care to prevent the brake caliper from scratching the wheel during installation.

NOTICE

When installing the brake caliper into position, carefully fit the brake disc between the pads to avoid scratching them.

2. Make sure that the lug on the brake caliper bracket is positioned in the slot on the swingarm.

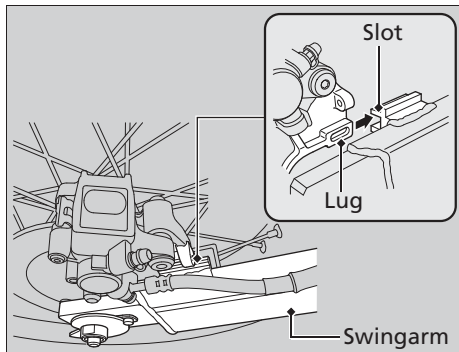

3. Adjust the drive chain slack. ► P. 68
4. Install and tighten the rear axle nut.

Torque: 65 lbf·ft (88 N·m, 9.0 kgf·m).

- Failure to provide adequate disc-to-caliper holder clearance may damage the brake discs and impair braking efficiency.