


### Starter Motor Operates But Engine Does Not Start

---

Check the following items:

- Make sure engine stop switch is RUN  position. ➤ P. 20
- Check the correct engine starting sequence. ➤ P. 23
- Check that there is gasoline in the fuel tank.

If the problem continues, have your motorcycle inspected by your dealer.

### Starter Motor Does Not Operate

---

Check the following items:

- Check for a blown fuse. ➤ P. 94
- Check for a loose battery connection or battery terminal corrosion. ➤ P. 40, 49
- Check the condition of the battery. ➤ P. 91

If the problem continues, have your motorcycle inspected by your dealer.