

## Blown Fuse

Before handling fuses, see “Inspecting and Replacing Fuses.” ► P. 43

### ■ Fuse Box Fuses

1. Remove the left side cover. ► P. 53
2. Open the battery compartment cover.
3. Pull out the fuses one by one to check for a blown fuse. Always replace a blown fuse with a spare of the same rating.
4. Close the battery compartment cover.
5. Reinstall the left side cover.

#### NOTICE

If a fuse fails repeatedly, you likely have an electrical problem. Have your motorcycle inspected by your dealer.

