

## Starter Motor Operates But Engine Does Not Start

---

Check the following items:

- Check the correct engine starting sequence.  
➔ P. 23
- Check that there is petrol in the fuel tank.
- Check if the PGM-FI malfunction indicator lamp (MIL) is on.
  - ▶ If the indicator light is on, contact your dealer as soon as possible.

## Starter Motor Does Not Operate

---

Check the following items:

- Check the correct engine starting sequence.  
➔ P. 23
  - Check for a blown fuse. ➔ P. 86
  - Check for a loose battery connection or battery terminal corrosion. ➔ P. 38, 49
  - Check the condition of the battery. ➔ P. 82
- If the problem continues, have your motorcycle inspected by your dealer.