


Rear Wheel

CFT125MR/MRC

Removal

1. Support your motorcycle securely and raise the rear wheel off the ground using the centre stand or a hoist.
2. Loosen the rear axle nut, drive chain lock nuts and turn the drive chain adjusting nuts so the rear wheel can be moved all the way forward for maximum drive chain slack.
3. Remove the rear axle nut and rear axle washer.

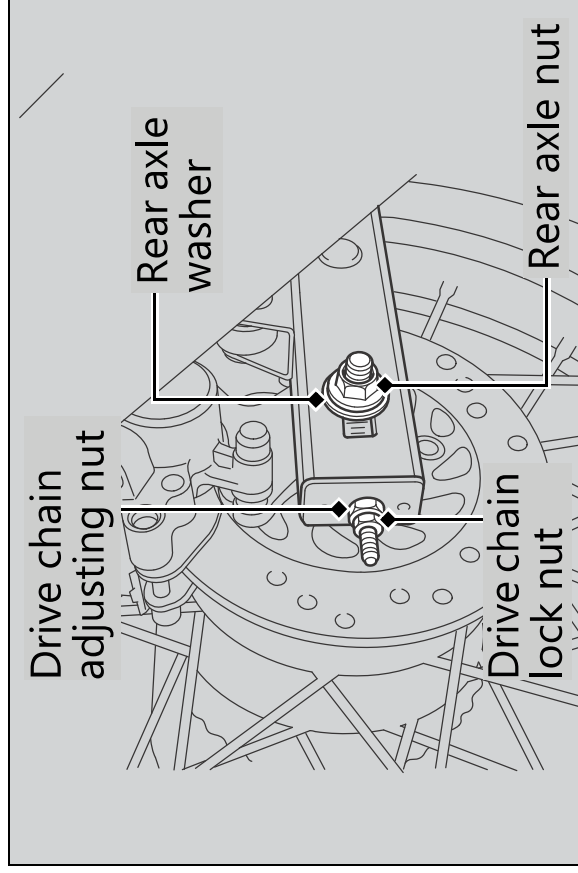

4. Remove the drive chain from the driven sprocket by pushing the rear wheel forward.

