

# Troubleshooting

|  |       |
|--|-------|
| <b>Engine Will Not Start</b> .....             | P. 78 |
| <b>Warning Indicators On or Flashing</b> ..... | P. 79 |
| PGM-FI (Programmed Fuel Injection)             |       |
| Malfunction Indicator Lamp (MIL).....          | P. 79 |
| ABS (Anti-lock Brake System) Indicator .....   | P. 80 |
| <b>Other Warning Indications</b> .....         | P. 81 |
| Fuel Gauge Failure Indication.....             | P. 81 |
| <b>Tire Puncture</b> .....                     | P. 82 |
| <b>Electrical Trouble</b> .....                | P. 88 |
| Battery Goes Dead .....                        | P. 88 |
| Burned-out Light Bulb.....                     | P. 88 |
| Blown Fuse .....                               | P. 92 |
| <b>Unstable Engine Operation Occurs</b>        |       |
| Intermittently .....                           | P. 93 |