

B. Disassembly**(S 90, CL 90, CL 90 L)**

1. Disassemble the handle and the top bridge plate ① in accordance with 4.1.B. (Fig. 4.19)

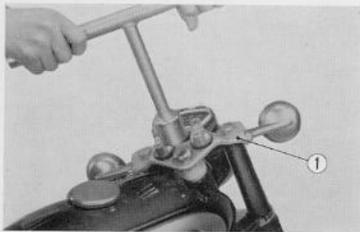


Fig. 4.19 Removing fork top bridge plate
① Fork top bridge plate

2. Disassemble the front cushion ① in accordance with 4.3.B. (Fig. 4.20)
3. The horn assembly is removed from the fork bottom bridge by removing the two 6×12 hex bolts.

(The horn may be removed either before or after the removal of the steering stem)



Fig. 4.20 Removing front cushion
① Front fork

4. Remove the steering head top thread ② using a 36 mm hook spanner ① (tool No. 07072~00101) and pull the steering stem out the bottom. (Fig. 4.21)

CAUTION:

Do not drop out the # 6 steel balls during the steering stem removal.

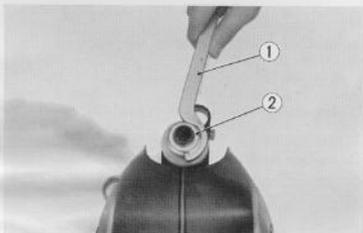


Fig. 4.21 Removing steering head top thread
① 36 mm hook spanner
② Steering head top thread