

## HOW TO USE THIS MANUAL

This service manual describes the service procedures for the CB1100SF.

Follow the Maintenance Schedule (Section 3) recommendations to ensure that the vehicle is in peak operating condition.

Performing the first scheduled maintenance is very important. It compensates for the initial wear that occurs during the break-in period.

Sections 1 and 3 apply to the whole motorcycle. Section 2 illustrates procedures for removal/installation of components that may be required to perform service described in the following sections. Sections 4 through 20 describe parts of the motorcycle, grouped according to location.

Find the section you want on this page, then turn to the table of contents on the first page of the section.

Most sections start with an assembly or system illustration, service information and troubleshooting for the section.

The subsequent pages give detailed procedure.

If you don't know the source of the trouble, go to section 22 Troubleshooting.

ALL INFORMATION, ILLUSTRATIONS, DIRECTIONS AND SPECIFICATIONS INCLUDED IN THIS PUBLICATION ARE BASED ON THE LATEST PRODUCT INFORMATION AVAILABLE AT THE TIME OF APPROVAL FOR PRINTING. HONDA MOTOR CO., LTD. RESERVES THE RIGHT TO MAKE CHANGES AT ANY TIME WITHOUT NOTICE AND WITHOUT INCURRING ANY OBLIGATION WHATEVER. NO PART OF THIS PUBLICATION MAY BE REPRODUCED WITHOUT WRITTEN PERMISSION. THIS MANUAL IS WRITTEN FOR PERSONS WHO HAVE ACQUIRED BASIC KNOWLEDGE OF MAINTENANCE ON HONDA MOTORCYCLES, MOTOR SCOOTERS OR ATVS.

HONDA MOTOR CO., LTD.  
SERVICE PUBLICATION OFFICE

## CONTENTS

	<b>GENERAL INFORMATION</b>	<b>1</b>
	<b>FRAME/BODY PANELS/EXHAUST SYSTEM</b>	<b>2</b>
	<b>MAINTENANCE</b>	<b>3</b>
<b>ENGINE AND DRIVE TRAIN</b>	<b>LUBRICATION SYSTEM</b>	<b>4</b>
	<b>FUEL SYSTEM (Programmed Fuel Injection)</b>	<b>5</b>
	<b>COOLING SYSTEM</b>	<b>6</b>
	<b>ENGINE REMOVAL/INSTALLATION</b>	<b>7</b>
	<b>CYLINDER HEAD/VALVES</b>	<b>8</b>
	<b>CLUTCH/GEARSHIFT LINKAGE</b>	<b>9</b>
	<b>ALTERNATOR/STARTER CLUTCH</b>	<b>10</b>
	<b>CRANKCASE/PISTON/CYLINDER</b>	<b>11</b>
	<b>CRANKSHAFT/TRANSMISSION/BALANCER</b>	<b>12</b>
	<b>CHASSIS</b>	<b>FRONT WHEEL/SUSPENSION/STEERING</b>
<b>REAR WHEEL/SUSPENSION</b>		<b>14</b>
<b>HYDRAULIC BRAKE</b>		<b>15</b>
<b>ELECTRICAL</b>	<b>BATTERY/CHARGING SYSTEM</b>	<b>16</b>
	<b>IGNITION SYSTEM</b>	<b>17</b>
	<b>ELECTRIC STARTER</b>	<b>18</b>
	<b>LIGHTS/METERS/SWITCHES</b>	<b>19</b>
	<b>IMMOBILIZER SYSTEM (HISS)</b>	<b>20</b>
	<b>WIRING DIAGRAM</b>	<b>21</b>
	<b>TROUBLESHOOTING</b>	<b>22</b>