



INSTALLATION

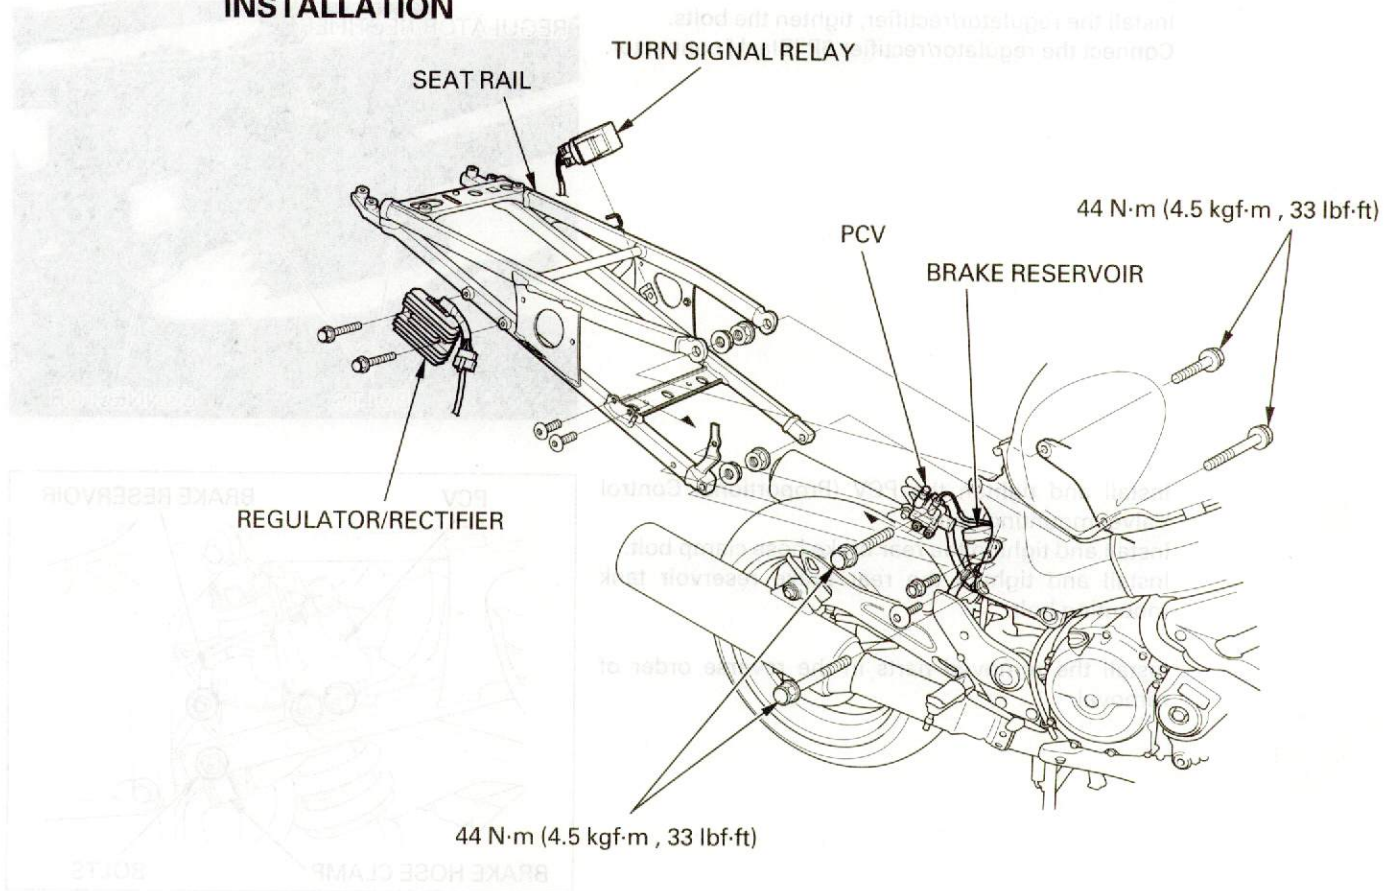

Install the seat rail and tighten the mounting bolts to the specified torque.

**TORQUE:** 44 N·m (4.5 kgf·m , 33 lbf·ft)

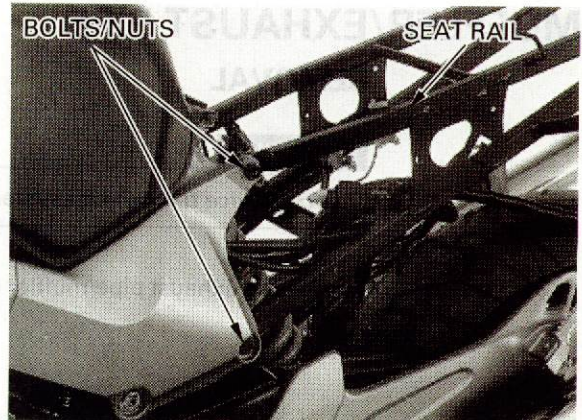

Install the turn signal relay onto the seat rail bracket.

