

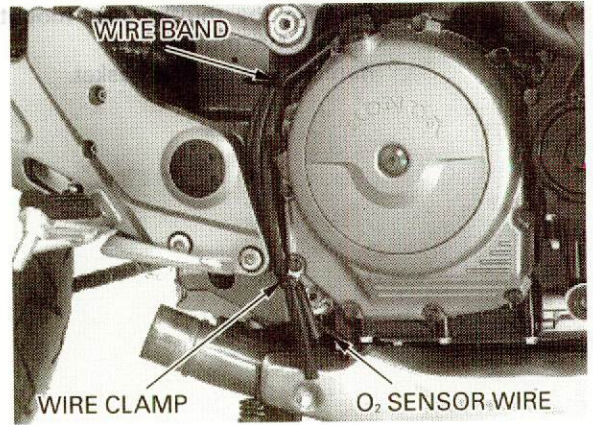
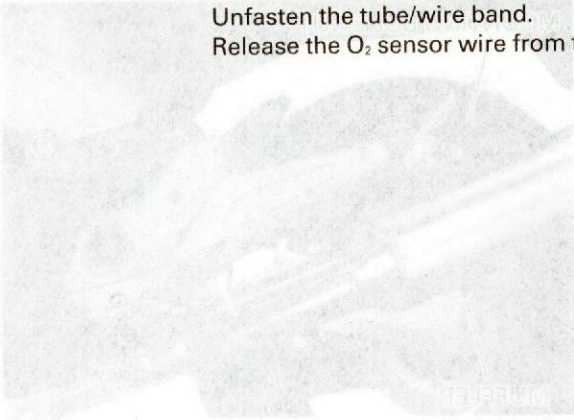


FRAME/BODY PANELS/EXHAUST SYSTEM



Unfasten the tube/wire band.
Release the O₂ sensor wire from the wire clamp.

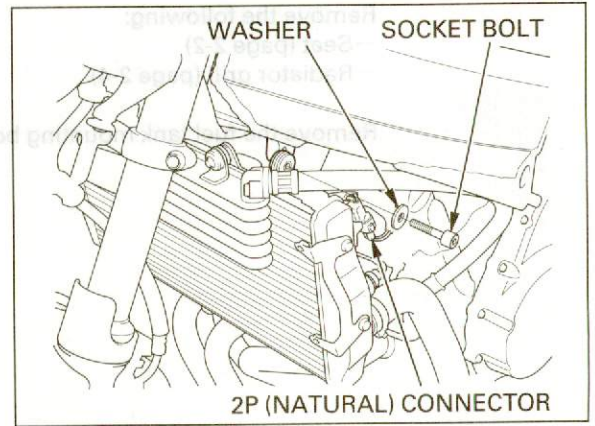

Disconnect the fan motor sub-harness 2P (Natural) connector.
Remove the radiator upper mounting socket bolt and washer.

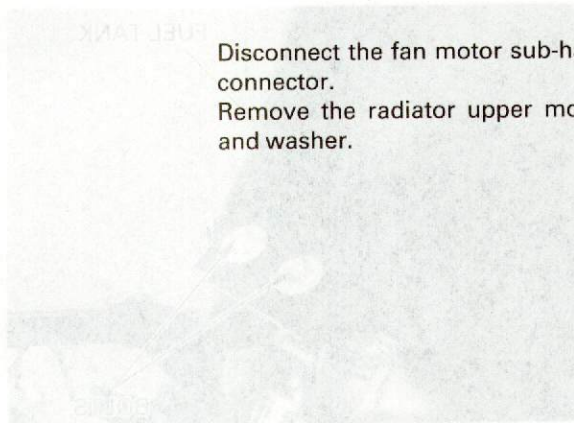

Remove the radiator from the upper and lower brackets by moving it to the right, then move the radiator/oil cooler forward as an assembly.

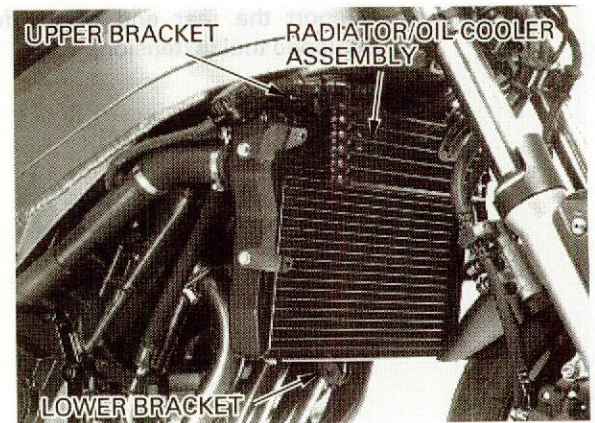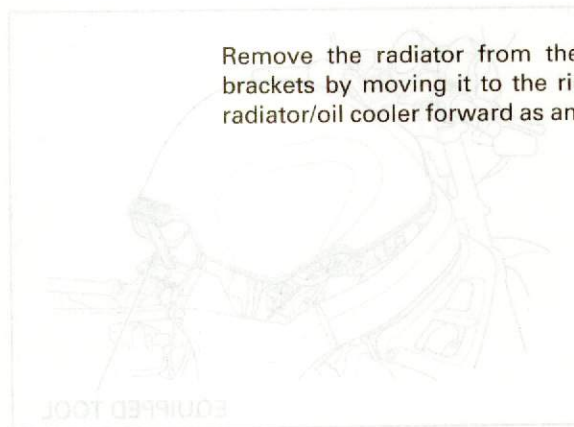

Remove the exhaust pipe joint nuts.

