


Measure the voltage between the terminals of the wire harness side.

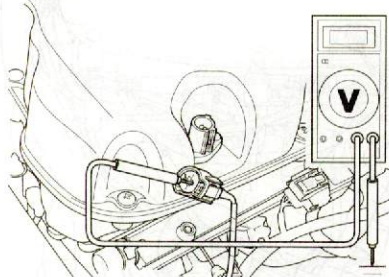


Connection:
Gray/Blue (+) – Ground (-)
Standard: 4.75 – 5.25 V

- Out of range →
- Open or short circuit in Gray/Blue wire
 - Loose or poor contact on the ECM connectors

Voltage exists

Measure the voltage between the terminals of the wire harness side.

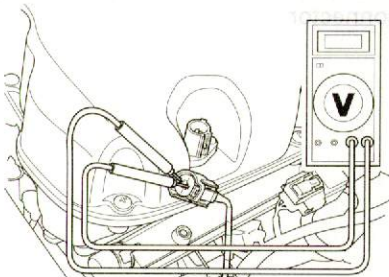

Connection:
Gray/Blue (+) – Green/Orange (-)
Standard: 4.75 – 5.25 V

- Out of range →
- Open or short circuit in Green/Orange wire
 - Loose or poor contact on the ECM connectors

- Voltage exists →
- Replace the ECM with a new one, and inspect it again