

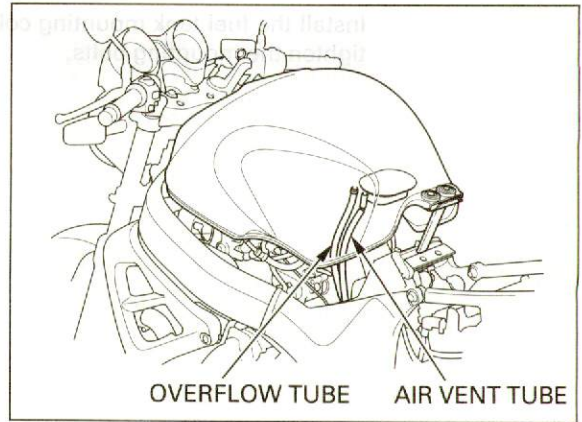
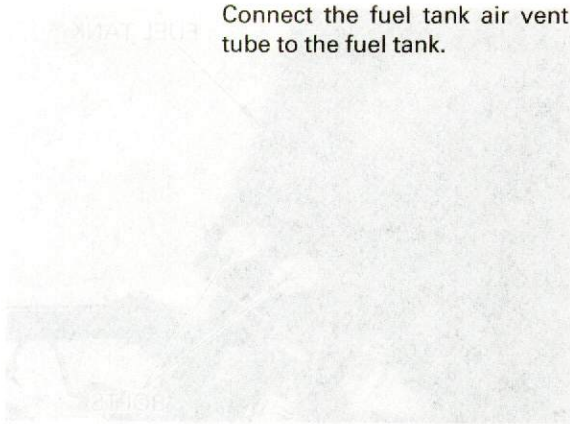


FUEL SYSTEM (Programmed Fuel Injection)

Connect the fuel tank air vent tube and overflow tube to the fuel tank.


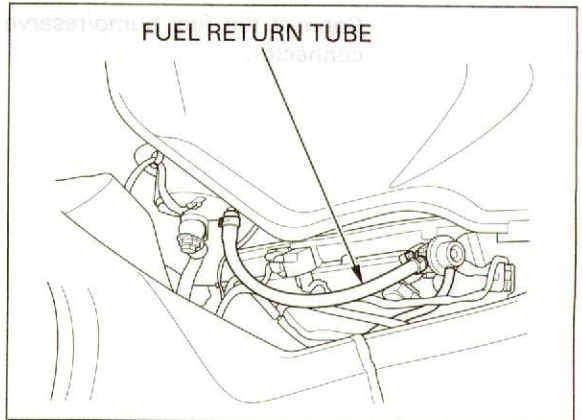


Connect the fuel return tube to the throttle body.

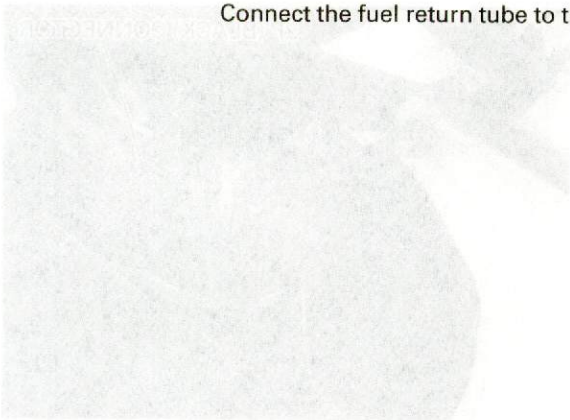

Connect the fuel tube banjo to the throttle body with new sealing washers. While pushing the fuel tube banjo stopper to the throttle body, install and tighten the sealing nut to the specified torque.

TORQUE: 22 N·m (2.2 kgf·m , 16 lbf·ft)

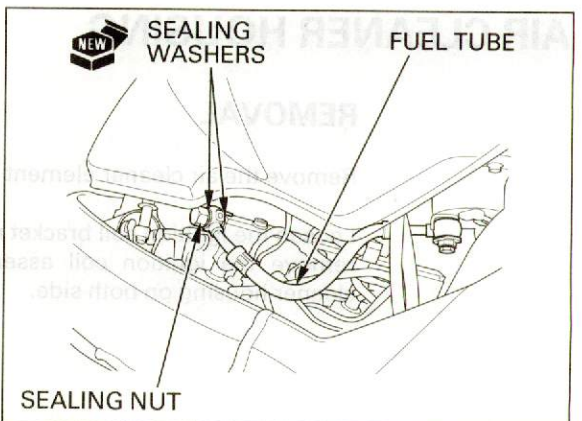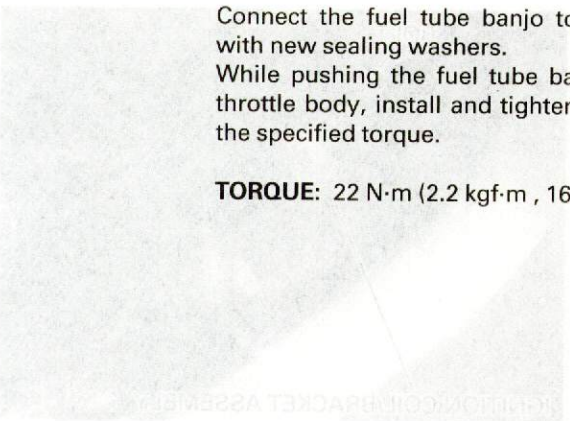

Remove the supporting tool and close the fuel tank.

