

## FUEL SYSTEM (Programmed Fuel Injection)


### No. 1/2 starter valve:

Install and tighten the choke link bracket screws to the specified torque.

**TORQUE:** 1 N·m (0.09 kgf·m , 0.7 lbf·ft)


Install the starter valve arm to the starter valve. Tighten the screws to the specified torque.

**TORQUE:** 1 N·m (0.09 kgf·m , 0.7 lbf·ft)

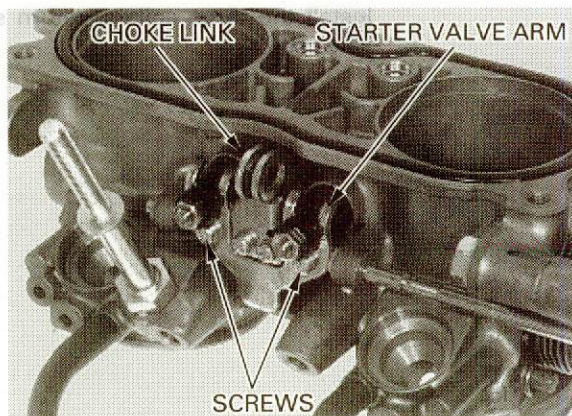


Install the throttle stop screw/choke cable bracket onto the throttle body, tighten the screws to the specified torque.

**TORQUE:** 5 N·m (0.5 kgf·m , 3.6 lbf·ft)

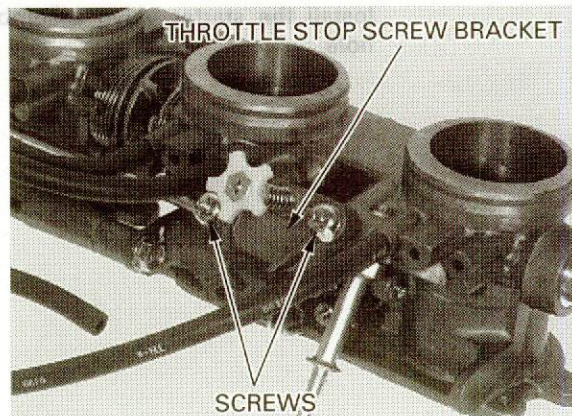

Install the choke cable end to the choke link, then hook the choke cable to the cable bracket.

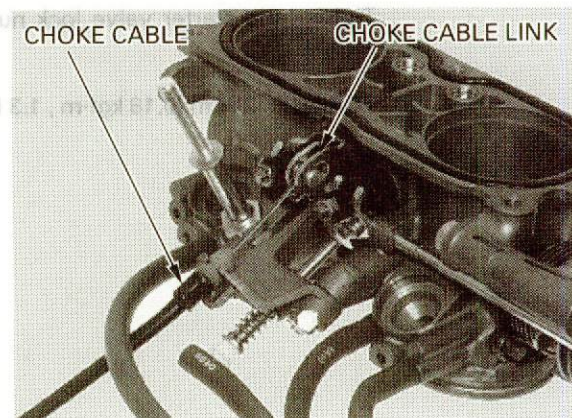

Turn the starter valve screw until it seats lightly, then back it out as noted during removal.

Install the throttle body (page 5-63).

