



## RIGHT CRANKCASE COVER REMOVAL

Drain the engine oil (page 3-16).

Remove the right crankcase cover SH bolts and right crankcase cover.

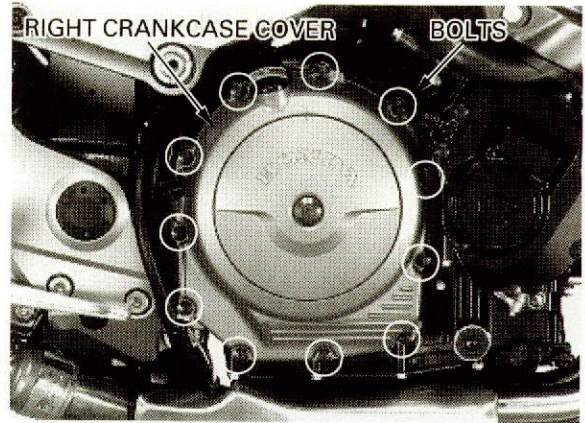


Remove the gasket.

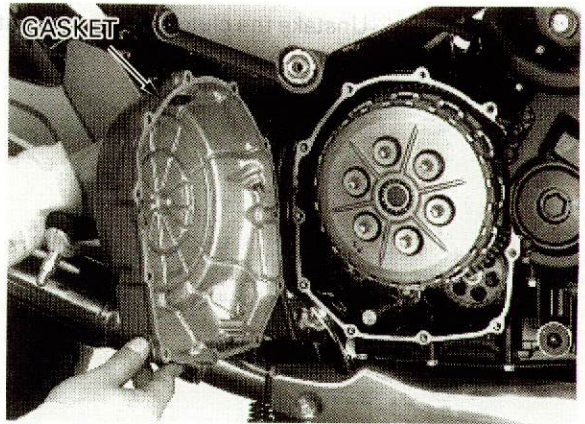

## CLUTCH

### REMOVAL

Remove the clutch spring bolts, springs and pressure plate.

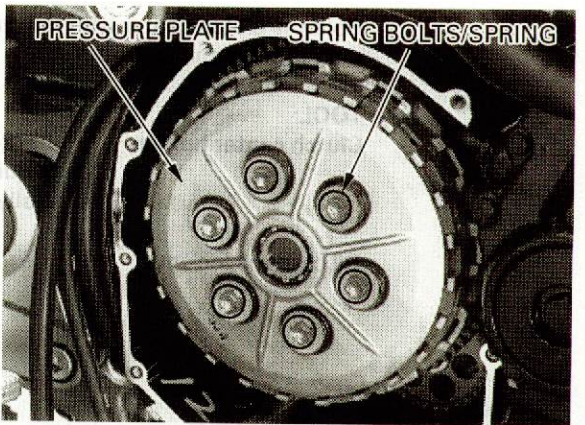

Remove the clutch lifter piece and lifter rod.

