

NOTE:

Install the outer clutch disc colored "Blue" in the shallow slot on the clutch outer.




Install the clutch lifter rod into the mainshaft.

Apply grease to the tip of the lifter rod and install clutch lifter piece into the mainshaft.



Install the lifter bearing into the pressure plate.
Install the pressure plate.

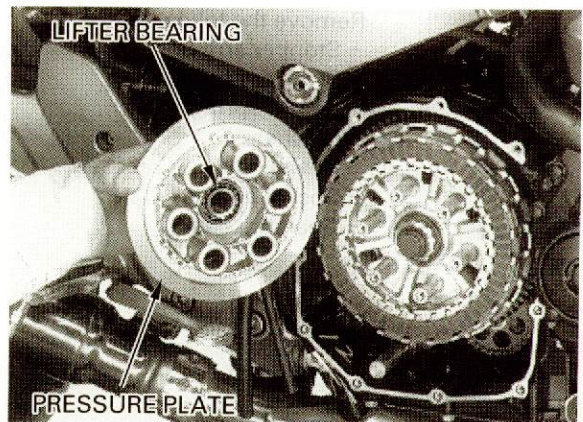

Install the clutch springs and spring bolts.
Tighten the bolts in a crisscross pattern in 2-3 steps to the specified torque.

TORQUE: 12 N·m (1.2 kgf·m, 9 lbf·ft)

Install the right crankcase cover (page 9-17).

