
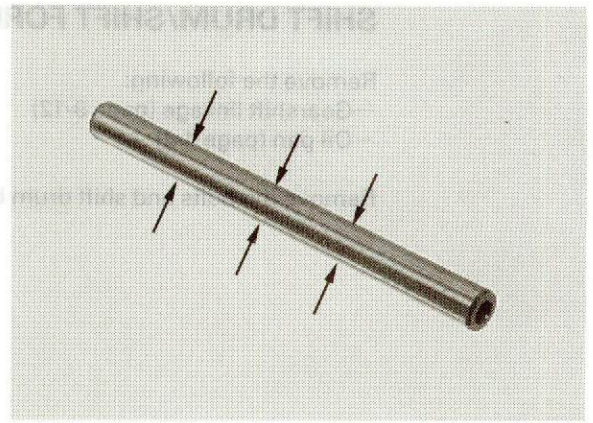




CLUTCH/GEARSHIFT LINKAGE

Measure the O.D. of the shift fork shaft.



SERVICE LIMIT: 11.95 mm (0.470 in)

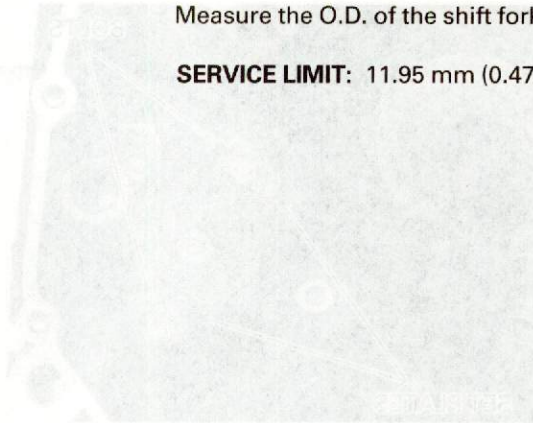

Inspect the shift drum grooves for wear or damage.

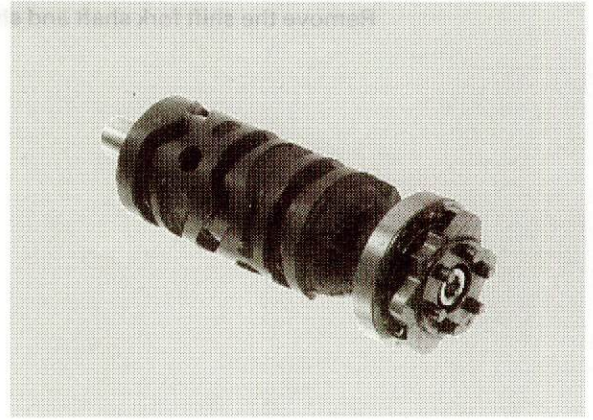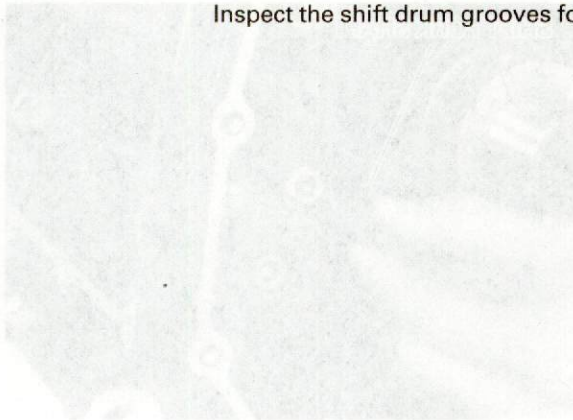

Turn the inner race of the shift drum bearing with your finger.
The bearing should turn smoothly and freely without excessive play.
If necessary replace the bearing.

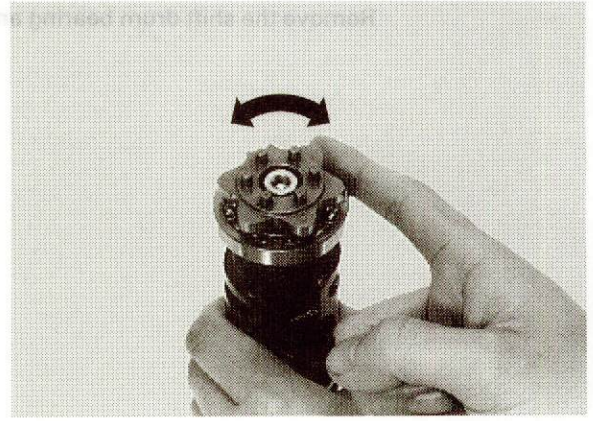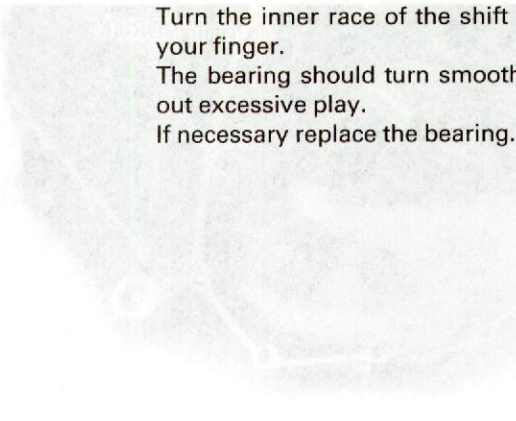

SHIFT DRUM/SHIFT FORK INSTALLATION

Install the shift drum and shift drum bearing.

