

## ALTERNATOR COVER REMOVAL

Support the rear end of the fuel tank (page 2-11).

Disconnect the alternator 3P (White) connector.




Remove the alternator cover SH bolts and alternator cover.

**CAUTION:**


*The alternator cover (stator) is magnetically attached to the flywheel, be careful during removal.*

**NOTE:**

The engine oil will run out when the alternator cover is removed. Set a clean oil pan under the engine and add the recommended oil to the specified level after installation.

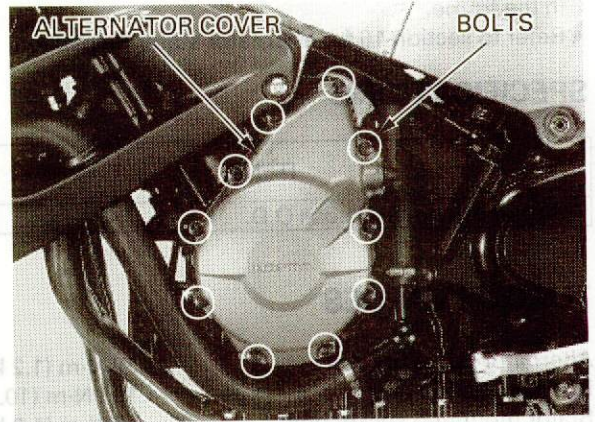

Remove the gasket and dowel pin.

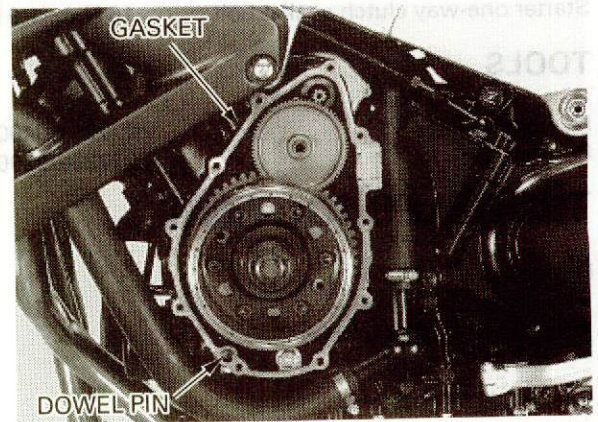

## STATOR

### REMOVAL

Remove the alternator wire grommet from the alternator cover.  
Remove the socket bolt and stator wire holder.  
Remove the socket bolts and stator.

