


ALTERNATOR/STARTER CLUTCH

Hold the flywheel using the flywheel holder, then remove the flywheel bolt.

TOOL:
Flywheel holder

07725-0040000
(Equivalent commercially available)

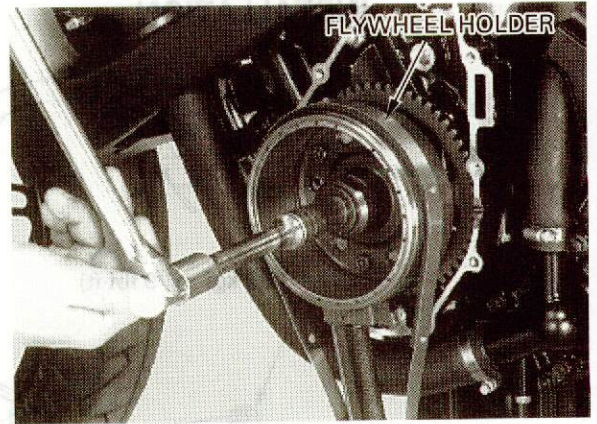


Remove the washer.


Remove the flywheel using the special tool.

TOOL:
Rotor puller

07733-0020001 or
07933-3950000

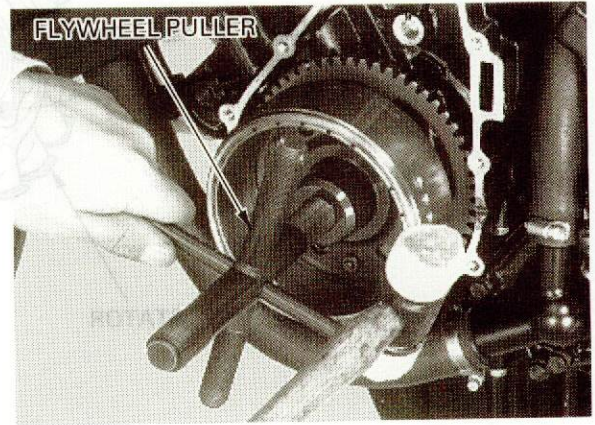

Remove the woodruff key.

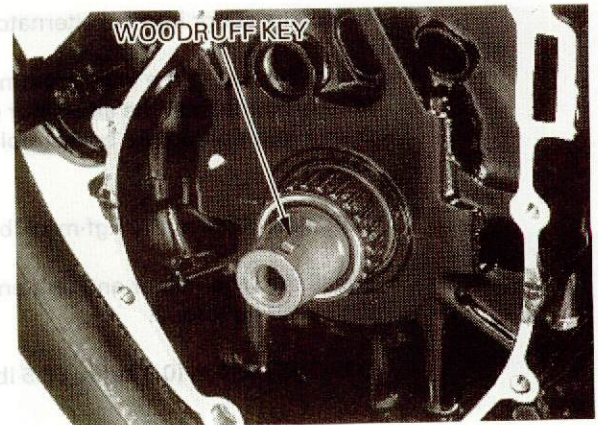

Check the starter idle gear and shaft for wear or damage.

