


Install the alternator cover.

CAUTION:

The alternator cover (stator) is magnetically attached to the flywheel, be careful during installation.

Install and tighten the SH bolts to the specified torque.

TORQUE: 12 N·m (1.2 kgf·m, 9 lbf·ft)

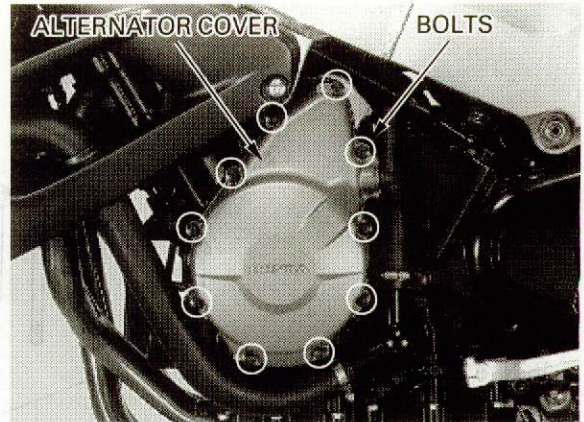

Connect the alternator 3P (White) connector.

Remove the fuel tank support tool, then tighten the fuel tank mounting bolts (page 2-15).

