

FORK


REMOVAL

Remove the front wheel (page 13-10).

CAUTION:

Keep the brake and clutch master cylinders upright.

For the left fork leg removal, remove the brake hose clamp bolt.

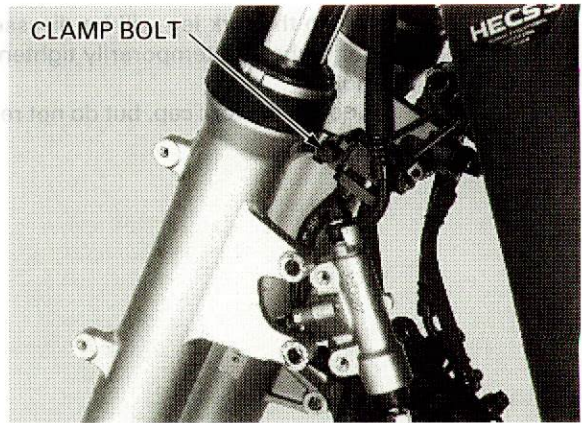


It is not necessary to remove the oil bolts and oil pipe from the delay valve.

For the right fork leg removal, remove the delay valve as follow:

1. Remove the brake pipe 3-way joint mounting bolt.



2. Remove the delay valve mounting bolts, then release the delay valve from the right fork leg.

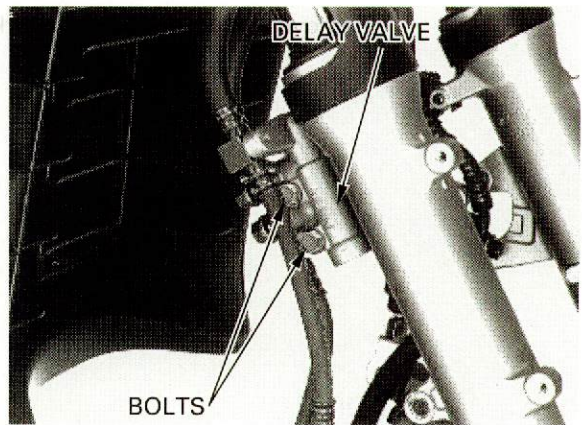

Loosen the top bridge pinch bolt.
Loosen the fork bottom pinch bolt and remove the fork tube from the fork top bridge and steering stem.

