


Remove the bolts and front brake hose/horn mounting bracket.

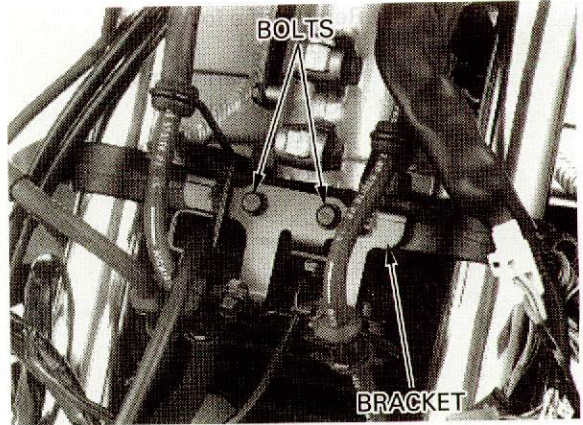


Remove the steering stem nut cap.

Loosen the steering stem nut.


Remove the following:  
 - Handlebar (page 13-3)  
 - Fork legs (page 13-17)

Remove the stem nut and the top bridge.

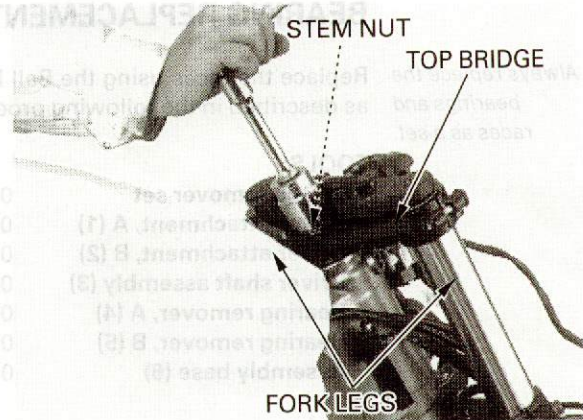

Straighten the tabs of the lock washer.

Remove the lock nut and lock washer.

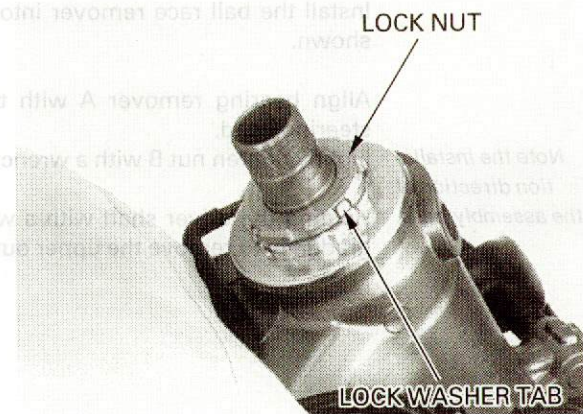

Remove the steering stem bearing adjusting nut using the special tool.

**TOOL:**  
**Steering stem socket**      07916-37101

